



**\*To Turn Off:** Hold down  for 3 seconds.

**To Lock + Unlock Keypad:** While in PLAY, quickly press power once;  or  symbol will appear on LCD screen.

**To Reset:** While in PAUSE, hold down the rewind (<<) and SPD buttons at the same time. When "RESET" is displayed on the LCD screen, quickly press the play button to confirm. When the Playaway is turned on again, it will start at the beginning.

## \*\*Backlit LCD Screen



- ① Current Function (Play/Pause/Lock)
- ② Current • Total (Chapters)
- ③ Battery Life
- ④ Time Remaining in Chapter
- ⑤ Book Progress Bar

## start listening



Plug earphones, speakers, or car adapter into the universal headphone jack on bottom of unit.†

 Press the POWER button.††

 Press the PLAY button.

**Enjoy your HD audiobook experience!**

†Fairport Public Library has car adapters (auxiliary cables and FM transmitters) available for checkout to listen on-the-go.

††If the power does not turn on, you may need to insert or replace the AAA battery.